




Header Vent Plug

Description

The header vent plug is used to release low pressure build up that may occur in closed system utilizing time delays or selector valves. The header vent plug should also be installed on the cylinder sides of the check valves on both main and reserve systems to relieve any pressure that may leak past the check valve and accidentally actuate the reserve system while the main system is discharging.

Shipping Assembly Part No.	Description
40309	Header vent plug

Component	Material	Thread Size/Type	Approvals
Vent Plug	Body: Brass Spring: Bronze Seal: Neoprene	1/2 IN. NPT Male	U.S. Coast Guard (162.038/7/0) UL (EX-2968) FM Approved

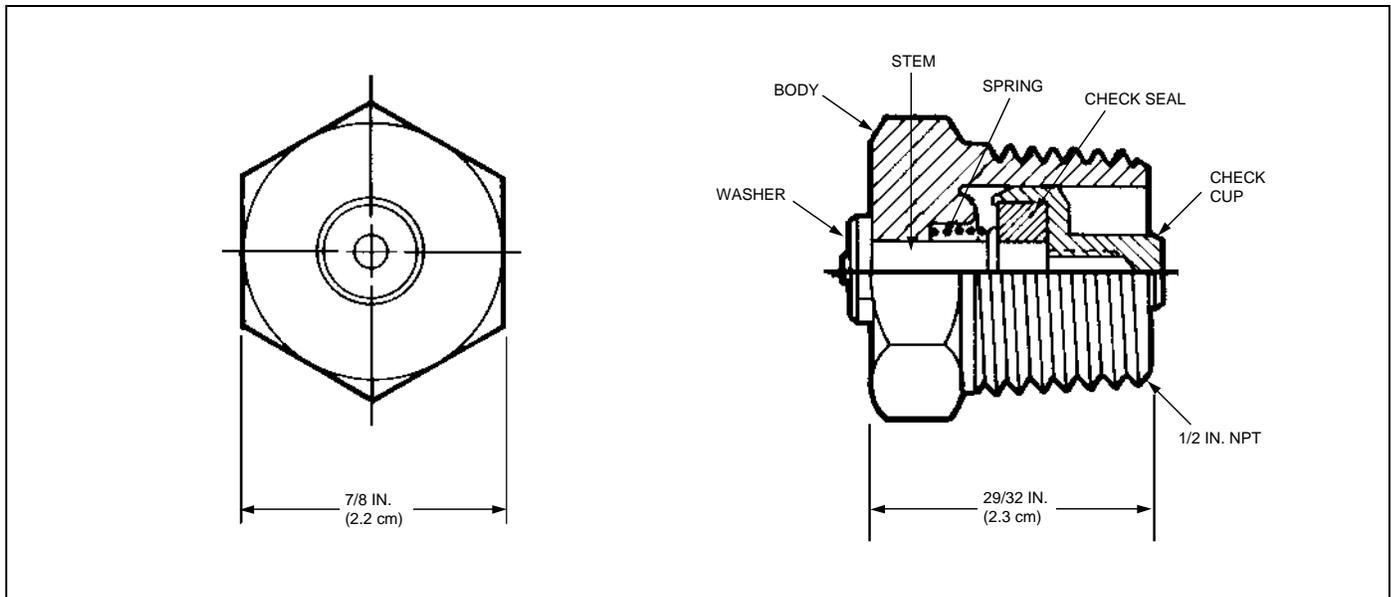

000707a

000707b

ANSUL is a registered trademark.